


FITTING INSTRUCTIONS

- SpareWheel Buddy - Fitting Instruction Manual

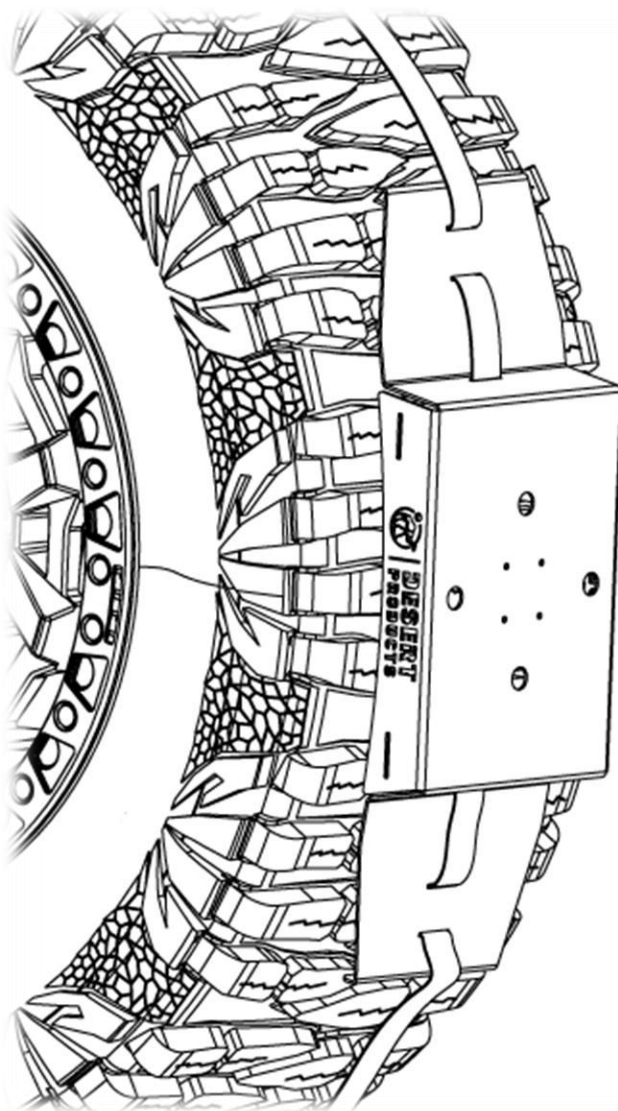

WARNING!




IT IS CRITICAL THAT OUR PRODUCTS BE PROPERLY AND SECURELY INSTALLED. NOT DOING SO COULD LEAD TO AUTOMOBILE ACCIDENT, AND COULD RESULT IN SERIOUS INJURY OR DEATH. YOU TAKE FULL RESPONSIBILITY TO MAKE SURE OUR PRODUCTS ARE ASSEMBLED AND SECURED CORRECTLY TO YOUR VEHICLE. IF YOU DO NOT HAVE EXPERIENCE IN SUCH A JOB, YOU SHOULD HAVE THE PRODUCTS INSTALLED BY A PROFESSIONAL OR QUALIFIED PERSONNEL. WE WILL NOT BE RESPONSIBLE FOR ANY DAMAGE CAUSED.

FITTING INSTRUCTIONS

1. ORGANISE

FIGURE 1.1

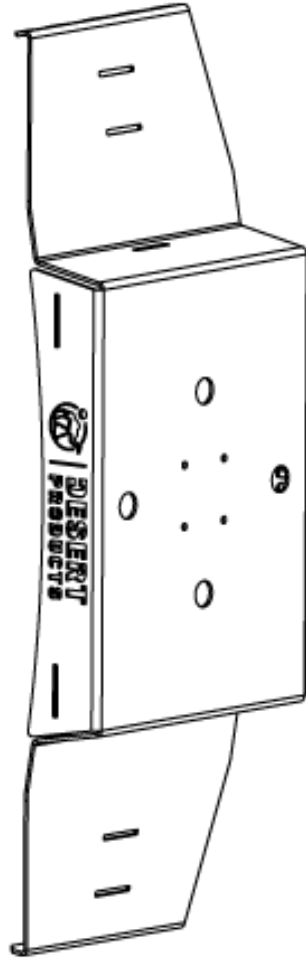

PART 1



PART 2

IN THE PACKAGING

1	DP SPAREWHEEL BUDDY	X 1
2	3m RATCHET STRAP	X 1

NO TOOLS NEEDED




Installation time is less than 5minutes



FITTING INSTRUCTIONS

2. FIT & SECURE

2.1

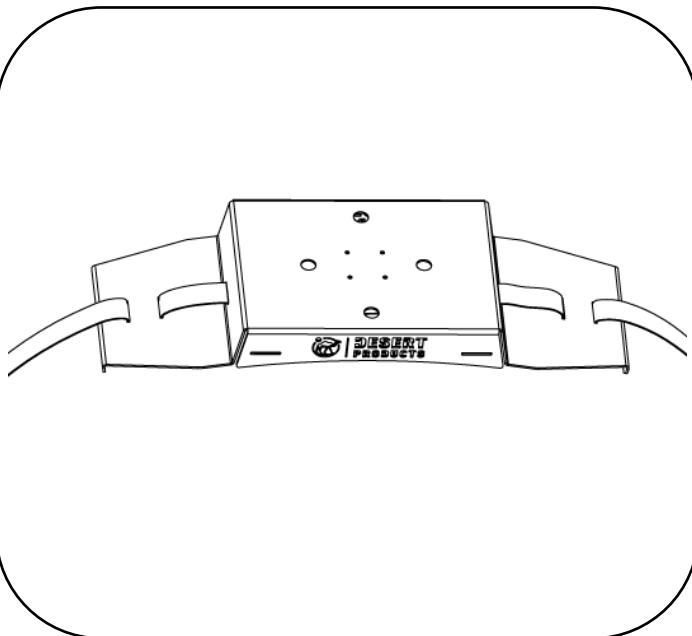


Step 1.

Start at either end of the bracket, weave the ratchet strap through the openings in the part.

As shown in Figure 2.1

2.2

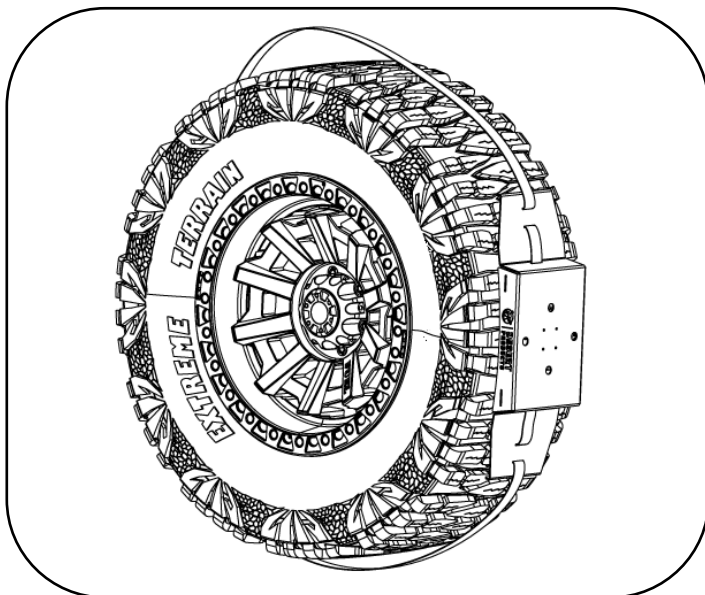


Step 2.

Put the "SpareWheel Buddy" against your spare tyre, wrap the strap around the tyre and then tighten the strap so that the "Buddy" is securely fastened against your tyre.

As shown in Figure 2.2

FITTING INSTRUCTIONS

-Finish off the Installation by adding some of our Accessories for the “Buddy” to have your vehicle stand out in the crowd.

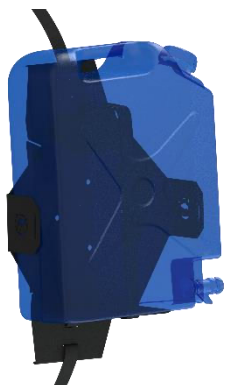

20L Water Can Accessory



ARB Jack Accessory



Gas Bottle Accessory



Universal Carry Accessory



High-Lift Jack Accessory

SPECIFICATIONS

DETAILS		
1	SpareWheel Buddy (Size)	140mm x 240mm x 220mm
2	SpareWheel Buddy (Part Number)	DES/SWAB
3	SpareWheel Buddy (Weight)	2kg
4	MAXIMUM WEIGHT TO CARRY	30kg each



Congratulations! All done. Enjoy your work!



NB! Accessories to be bought separately.

More Accessories will be available in the near future..